End WIFE Neglect!

One of the worst crimes of camera misuse....

Happy Wife, Happy Life

WIFE


DIGITAL CAMERA CHECKLIST BEFORE SHOOTING

WIFE

- White balance
- so
- **F**ile size
- **E**xposure mode


White Balance

White Balance - Canon

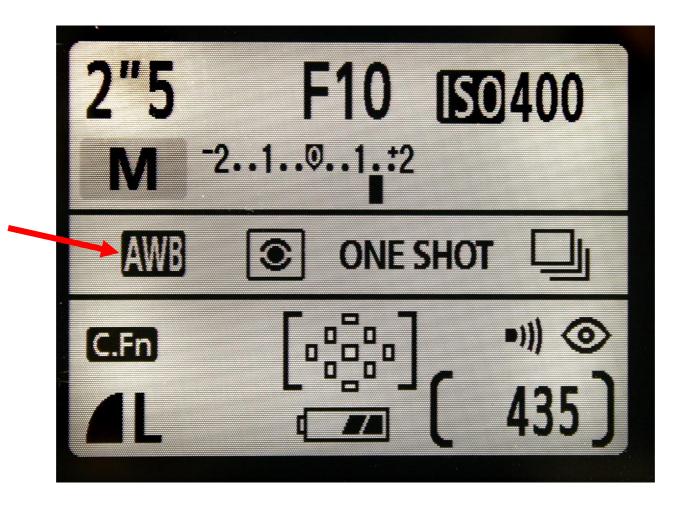




White Balance – Nikon

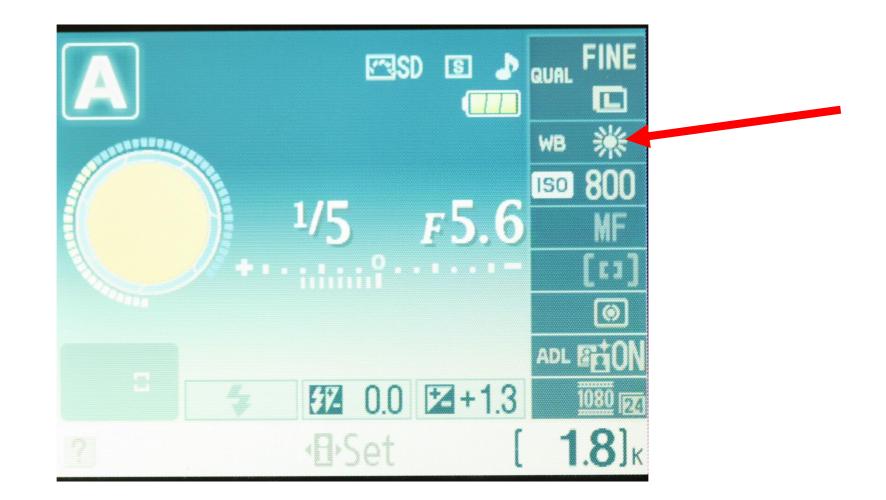


White Balance – Nikon – push MENU button on back of camera then go to White balance

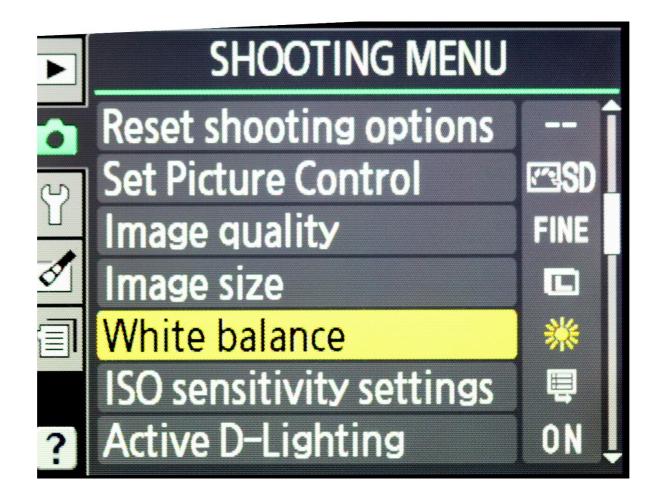



SO

ISO - Canon

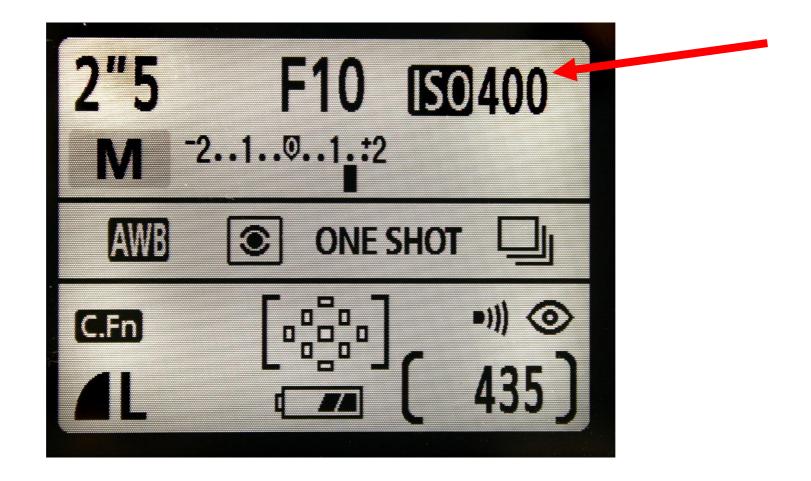





ISO – Nikon 3100



Press MENU button on back of camera then set to the camera menu




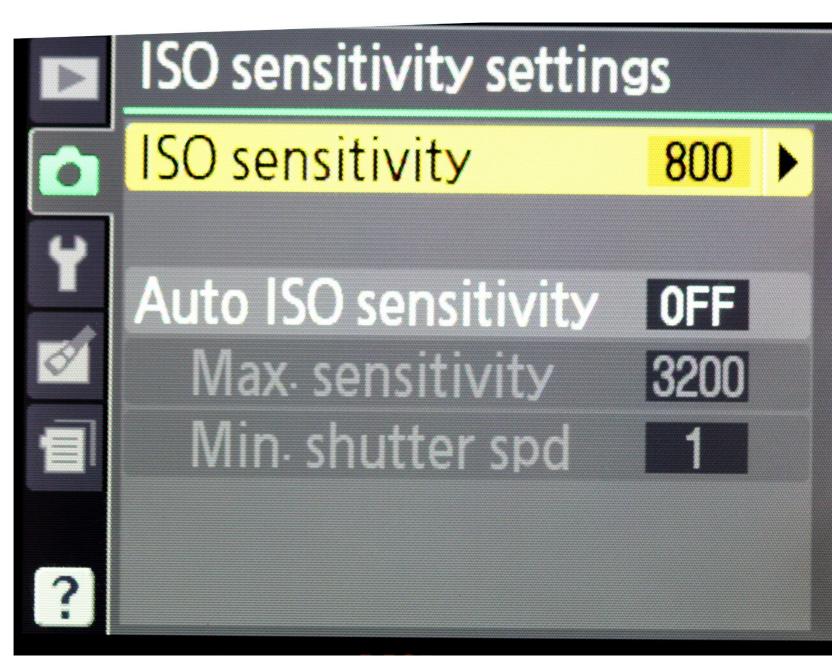


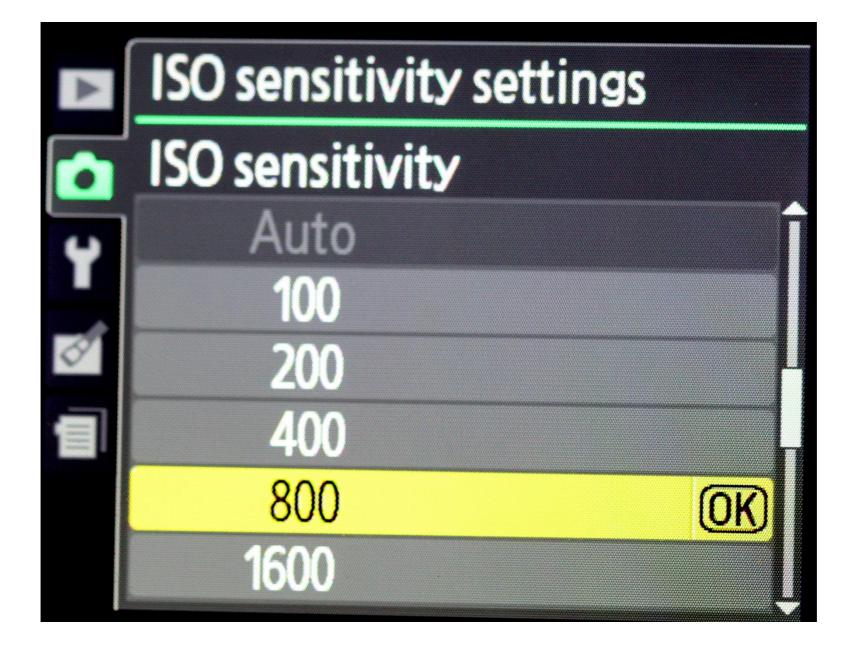

File size and quality

File size -Canon

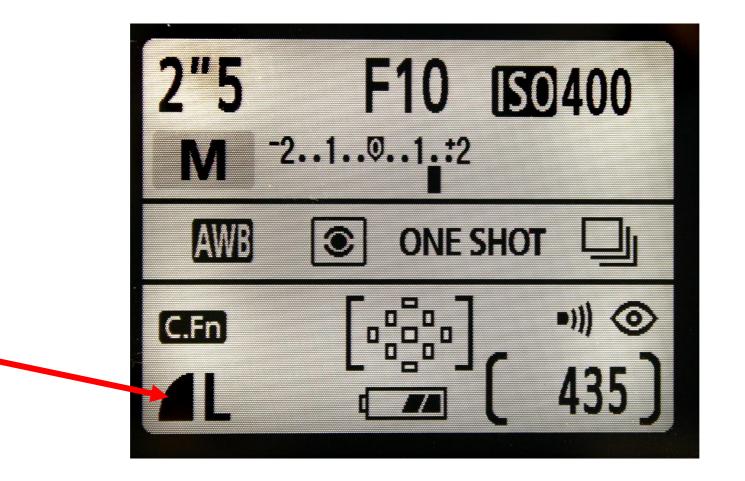


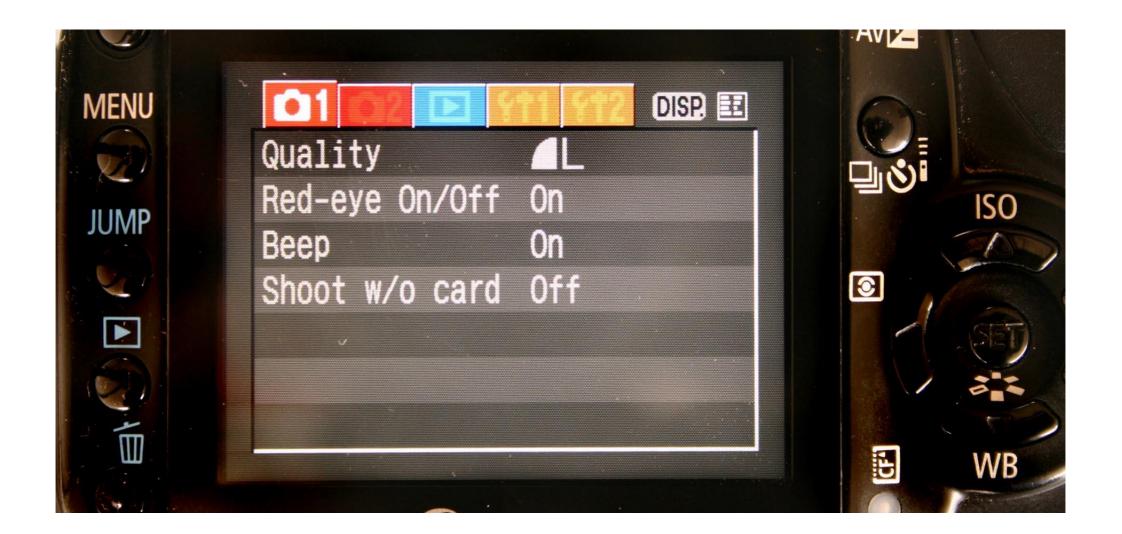




```
File Size and quality – Nikon
```

quality should be set to FINE and file size should be L or RAW

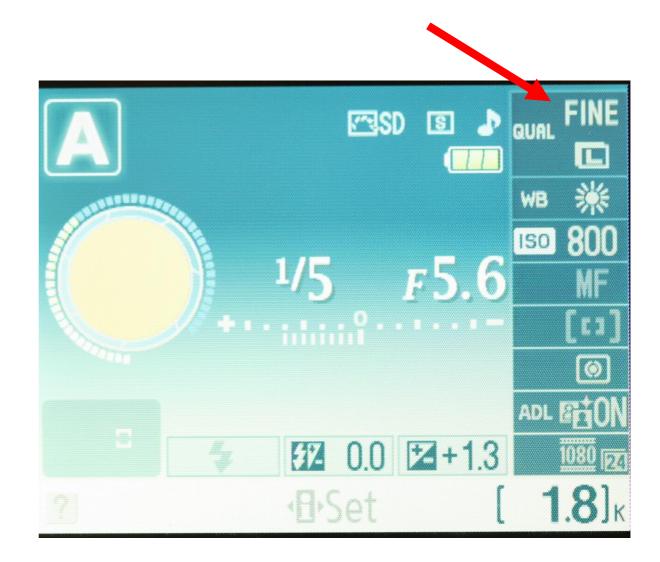

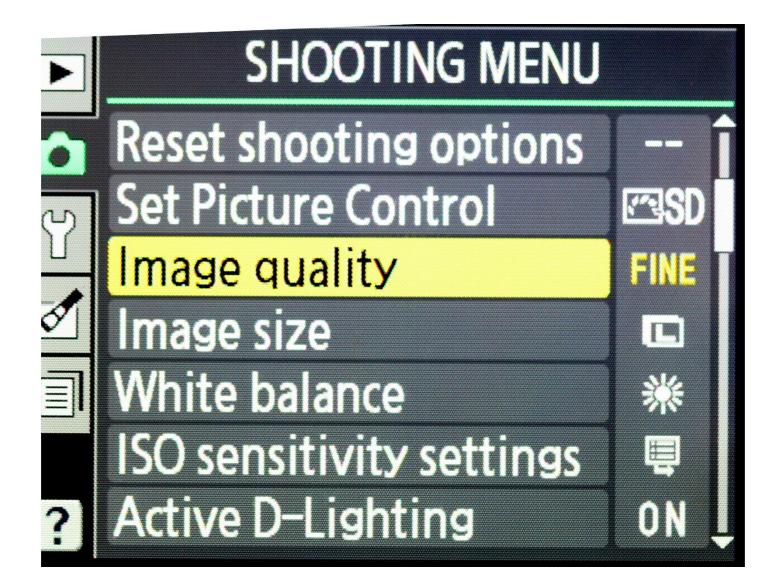

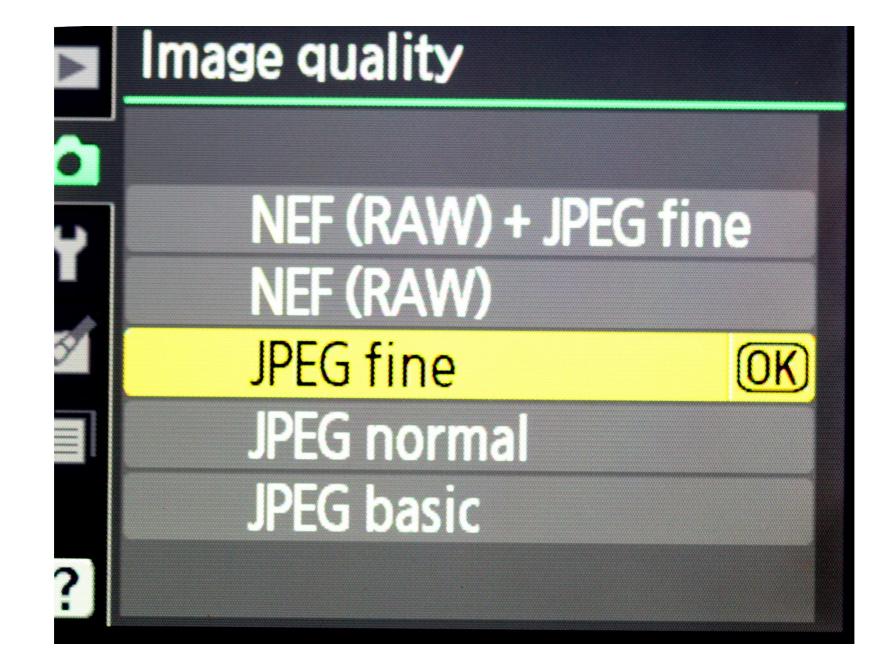




Image quality



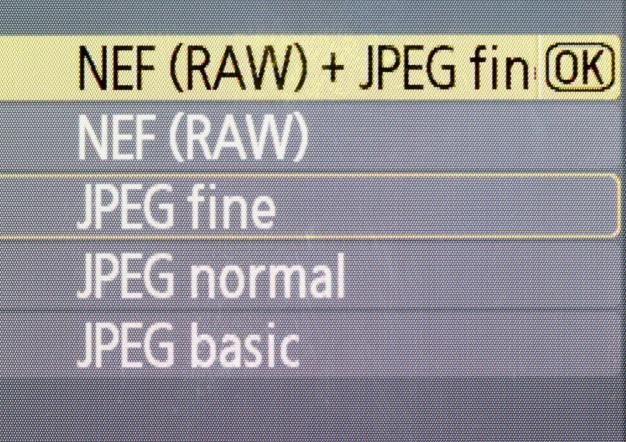


Image Size - Nikon



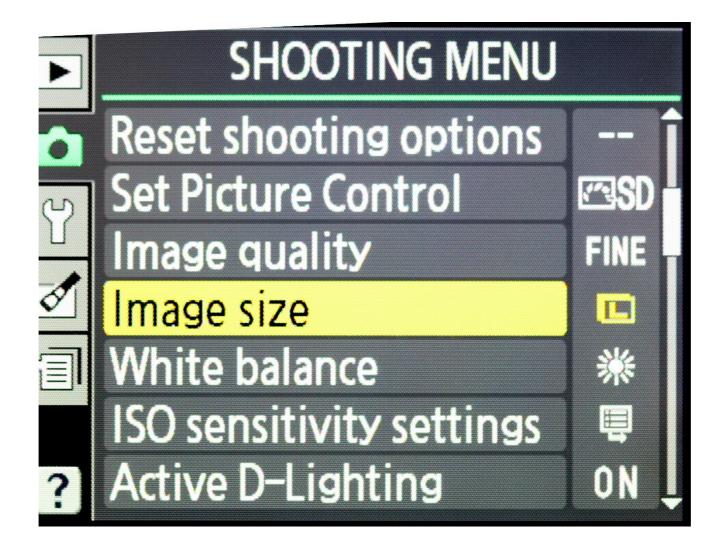

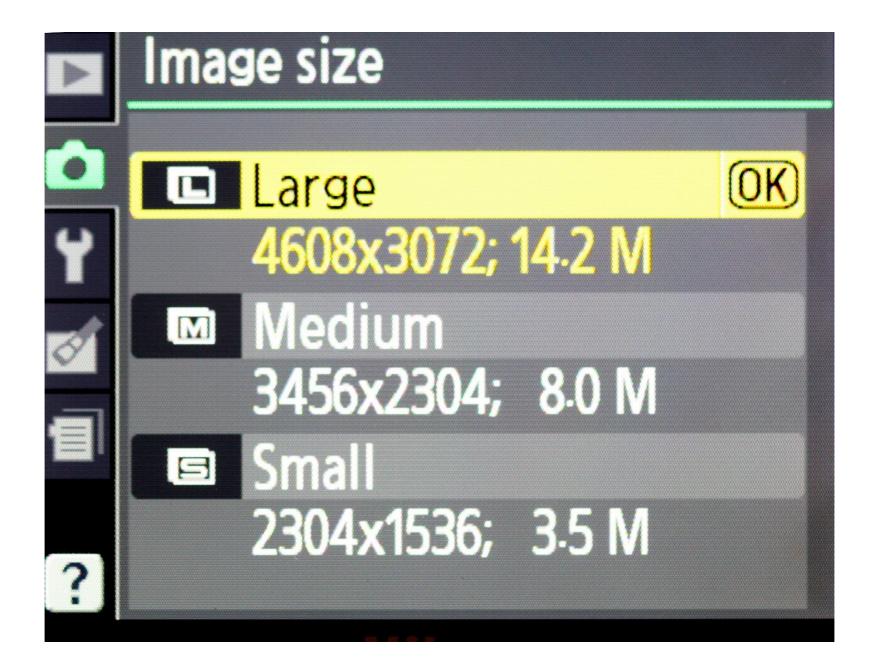

Shooting Modes




Exposure Compensation while on Program, S (Tv), or A (Av) Modes



- Hold +/- button while moving dial
- This current displayed setting would overexpose every shot by one stop

Canon

Nikon 3100

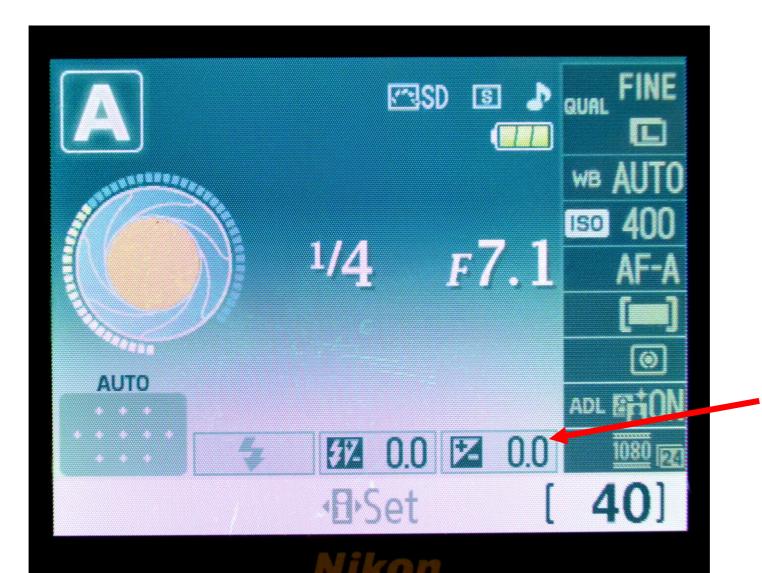

Check here to make sure The exposure compensation Is not on



If this is not at 0.0 then it will not be exposing at 18% gray

If in doubt...ask